

Xerox[®] Adaptive CMYK Plus Technology Cart

Carrier Procedures Manual

© 2019 Xerox Corporation. All rights reserved. Xerox® is a trademark of Xerox Corporation in the United States and/or other countries.

Printed in the United States of America.

Changes are periodically made to this document. Changes, technical inaccuracies, and typographic errors will be corrected in subsequent editions.

Document Version: 1.0 (June 2019).

Revision Control List

All pages are June 2019 unless otherwise specified.

Page	Issue

Page	Issue

This document is intended for use by authorized Logistic Service Providers only and is not for resale.

This document describes the Pre-Install process steps/packaging items that must be used to ensure the product can be safely shipped after Pre-Install before shipping to the Customer.

While every care has been taken in the preparation of this manual, no liability will be accepted by Xerox arising out of the use of this manual including, but not limited to, inaccuracies or omissions.

Any damage / installation failures caused by Pre-Installation steps deviating from the described process in this document will be at your own risk, no warranty replacements will be guaranteed.

Notes:

Notes are signified by the use of the Info symbol. The word Note is not used in Carrier manuals. A note is used to alert personnel to a procedure, practice, condition or statement that is necessary to accomplish a task efficiently.

Notes usually precede the step describing the action that needs additional explanation, but may follow the step if necessary for clarity.

Cautions:

A Caution is used whenever a procedure, practice, condition, or statement, if not strictly observed, could result in damage to the equipment. Cautions are identified with an Alert symbol and the word CAUTION (all caps) at the beginning of the paragraph.

Cautions ALWAYS precede the step with the action.

Warning:

Warnings are used whenever a procedure, practice, condition, or statement, if not strictly observed, could result in personal injury or death. Warnings are identified with the appropriate warning symbol and the word WARNING (all caps, bold) at the beginning of the paragraph. When a specific warning symbol is not available an "Alert" symbol will be used to identify.

Warnings ALWAYS precede the step with the action.

Table of Contents

Section 1: General Information	1-1
General Information	1-2
Product Codes and Part Numbers	1-2
Packaged Product Weights and Sizes	1-2
Unpackaged Product Weights and Sizes	1-2
Section 2: LSP - Configuration	2-1
LSP - Configuration Processes	2-2
Tools Required	2-2
Moving the Xerox® Adaptive CMYK Plus Technology Cart to the Truck	2-2
Section 3: Warehouse3-1	
Warehouse	3-2
Tools Required	3-2
Moving the Xerox® Adaptive CMYK Plus Technology Cart to the Truck	3-2
Section 4: Delivery4-1	
Delivery	4-2
Tools Required	4-2
Moving and Strapping the Xerox® Adaptive CMYK Plus Technology Cart to the Truck	4-2
Special Handling	4-3
Turning Radii	4-4
Space Requirements	4-4
Unpacking and Positioning the Xerox® Adaptive CMYK Plus Technology Cart ..	4-5
Section 5: Relocation/Removal5-1	
Relocation/Removal	5-2
Materials Required	5-2
Preparing the Xerox® Adaptive CMYK Plus Technology Cart for the Relocation/Return	5-2
Complex Relocation	5-5
Moving and Strapping the Xerox® Adaptive CMYK Plus Technology Cart to the Truck (if required)	5-5
Position the Xerox® Adaptive CMYK Plus Technology Cart at the New Location	5-6
Section 6: Repack and Return6-1	
Repack and Return	6-2
Repacking Processes for the Xerox® Adaptive CMYK Plus Technology Cart	6-2
Repacking the Xerox® Adaptive CMYK Plus Technology Cart for Return	6-2
Section 7: Accessories	7-1
This Section does not apply	

Section 8: Ready to Run 8-1

This Section does not apply

General Information

1

Product	Product Code/ Part Numbers North America (60Hz)	Install Responsibility North America	Product Code/ Part Numbers Europe (50Hz)	Install Responsibility Europe
Xerox® Adaptive CMYK Plus Technology Cart (Vivid Toner Kit)	MQD/097N02369	Carrier (Unpack/ Position)	MQD/097N02369	LSP (Unpack/ Position)
Xerox® Adaptive CMYK Plus Technology Cart (Florescent Toner Kit)	MQE/097N02370	Carrier (Unpack/ Position)	MQE/097N02370	LSP (Unpack/ Position)
Xerox® Adaptive CMYK Plus Technology Cart (Combined Vivid + Florescent Toner Kits)	MQF/097N02371	Carrier (Unpack/ Position)	MQF/097N02371	LSP (Unpack/ Position)

Table 1.1.1

Product Code/Part Number	Packaged Weight		Packaged Size (W x D x H)	
	kg	lb	mm	in
Xerox® Adaptive CMYK Plus Technology Cart	93	205	997 x 819 x 851	39.25 x 32.25 x 33.5

Table 1.2.1

Product Code/Part Number	Unpackaged Weight		Unpackaged Size (W x D x H)	
	kg	lb	mm	in
Xerox® Adaptive CMYK Plus Technology Cart	67	147.5	924 x 711 x 705	36.5 x 28 x 27.75

Table 1.3.1

1.0.0 General Information

1.1.0 Product Codes and Part Numbers

1.1.1 Product codes and part numbers for the Xerox® Adaptive CMYK Plus Technology Cart are shown in Table 1.1.1.

1.2.0 Packaged Product Weights and Sizes

1.2.1 Packaged weights and sizes for the Xerox® Adaptive CMYK Plus Technology Cart system are shown in Table 1.2.1.

1.3.0 Unpackaged Product Weights and Sizes

1.3.1 Unpackaged weights and sizes for the Xerox® Adaptive CMYK Plus Technology Cart are shown in Table 1.3.1.

LSP - Configuration Europe Only



2.1.1



2.2.1



2.0.0 LSP - Configuration Processes

2.1.0 Tools Required

2.1.1 Tools for moving the Xerox® Adaptive CMYK Plus Technology Cart to the truck are shown.



Note: Do not depalletize or unpack the Xerox® Adaptive CMYK Plus Technology Cart. Transport it to the Customer site in its original packaging and on its original pallet.

2.2.0 Moving the Xerox® Adaptive CMYK Plus Technology Cart to the Truck



2.2.1 Place the cart on its pallet on a pallet jack or use a forklift and move the cart and pallet onto the truck.



Note: This concludes the LSP - Configuration procedures for the Xerox® Adaptive CMYK Plus Technology Cart.

Warehouse

3

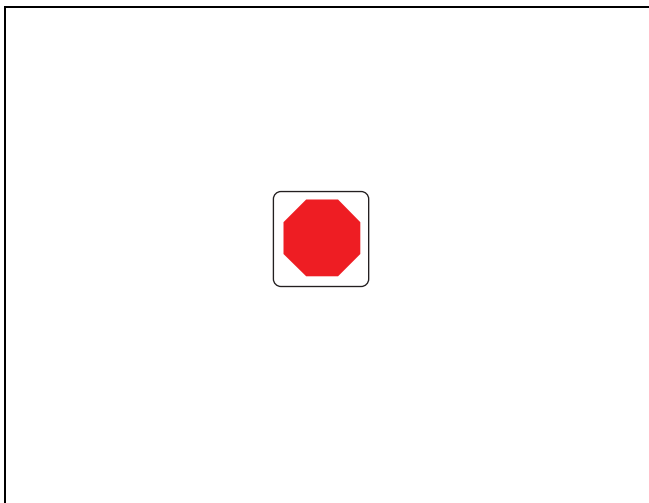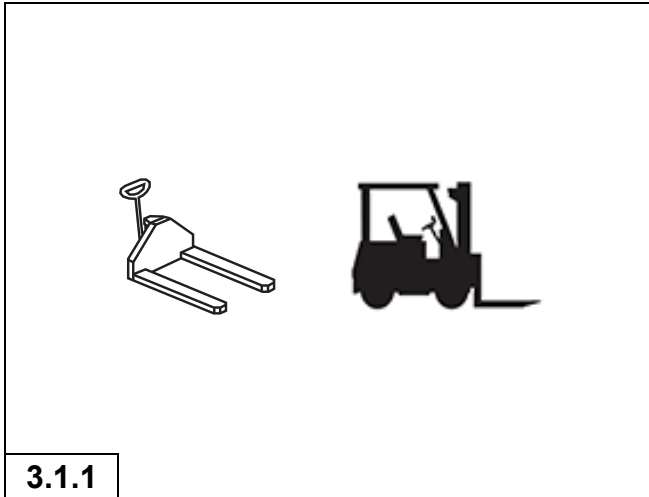

3.0.0 Warehouse

3.1.0 Tools Required

3.1.1 Tools for moving the Xerox® Adaptive CMYK Plus Technology Cart to the truck are shown.



Note: Do not depalletize or unpack the Xerox® Adaptive CMYK Plus Technology Cart. Transport it to the Customer site in its original packaging and on its original pallet.

3.2.0 Moving the Xerox® Adaptive CMYK Plus Technology Cart to the Truck




3.2.1 Place the cart on its pallet on a pallet jack or use a forklift and move the cart and pallet onto the truck.



Stop: This concludes the Warehouse procedures for the Xerox® Adaptive CMYK Plus Technology Cart.

Delivery

4

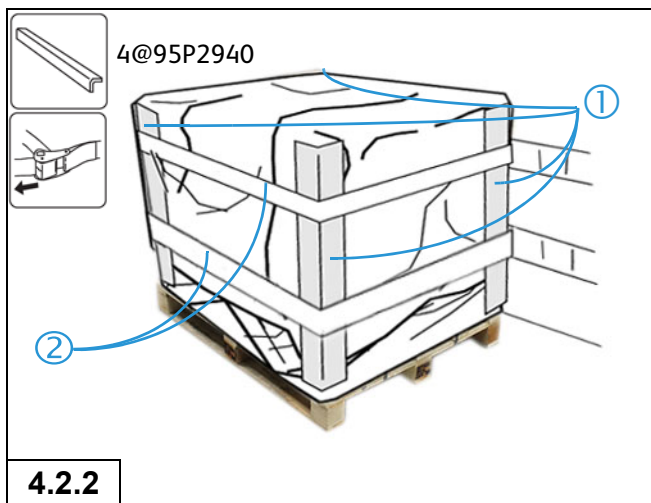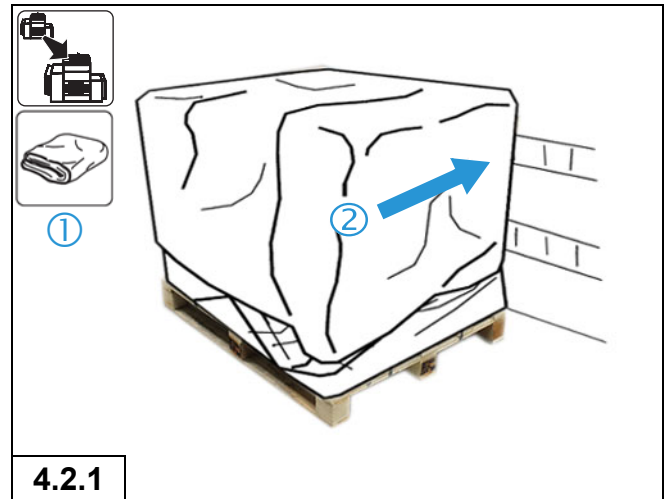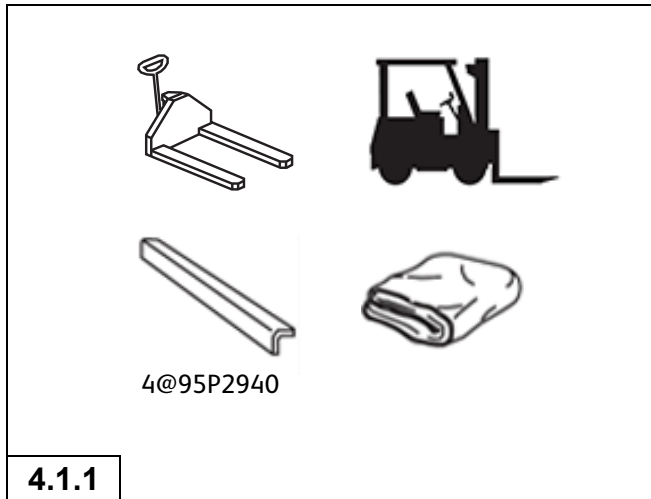

4.0.0 Delivery





4.1.0 Tools Required

4.1.1 The tools and materials required to move and strap the Xerox® Adaptive CMYK Plus Technology Cart to the truck are shown.

4.2.0 Moving and Strapping the Xerox® Adaptive CMYK Plus Technology Cart to the Truck

4.2.1 Once the cart is on the truck, ① cover with a folded blanket and ② position the cart against the wall of the truck.

4.2.2 ① Position a cornerboard (95P2940) on each corner and ② strap the module into the truck with two straps.

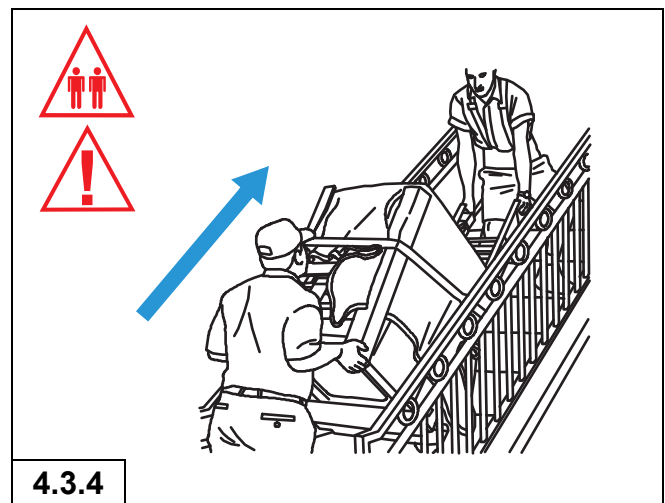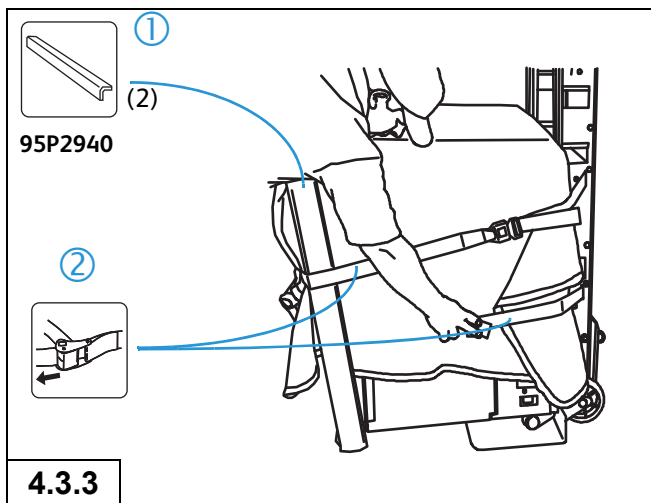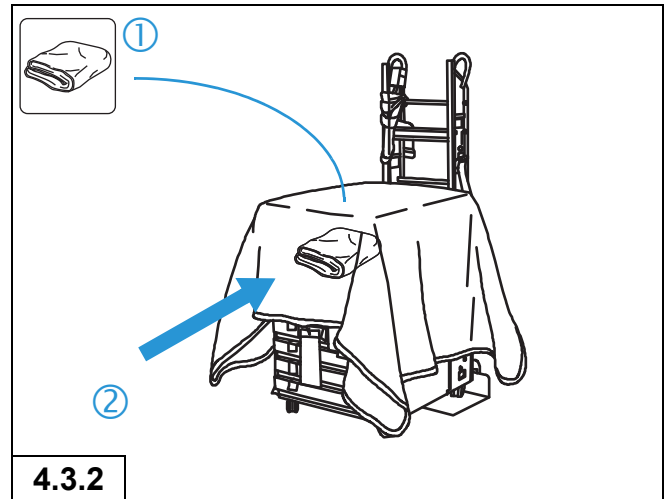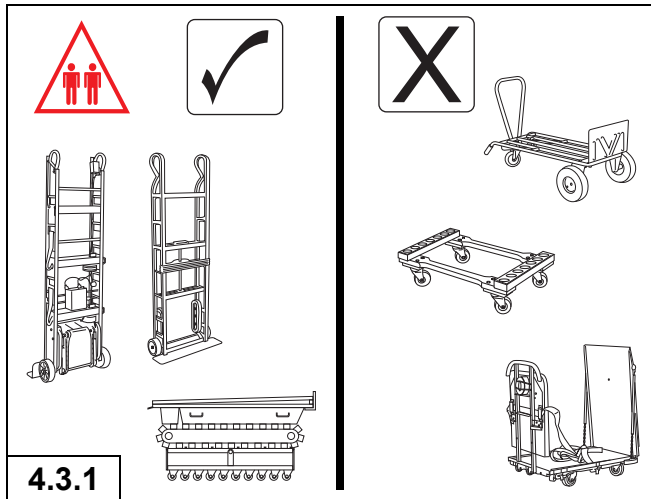

4.3.0 Special Handling



WARNING: Always use a plate extension on the appliance dolly when transporting the Xerox® Adaptive CMYK Plus Technology Cart to avoid personal injury.

4.3.1 To move the cart up or down the a flight of steps, an escalara is required. If an escalara is not available, a stair climber or appliance dolly with plate extensions may be used.

4.3.2 ① Place a blanket over the cart and ② roll it rear first onto the escalara.

4.3.3 ① Place cornerboards on the cart front left and right edges and ② strap to the escalara.




WARNING: Due to the weight of the cart, two people are required when raising or lowering it on a flight of steps.



CAUTION: The cart should be tipped only on its rear with the bottom side down when moved up a flight of stairs.

4.3.4 Move the cart up the steps.

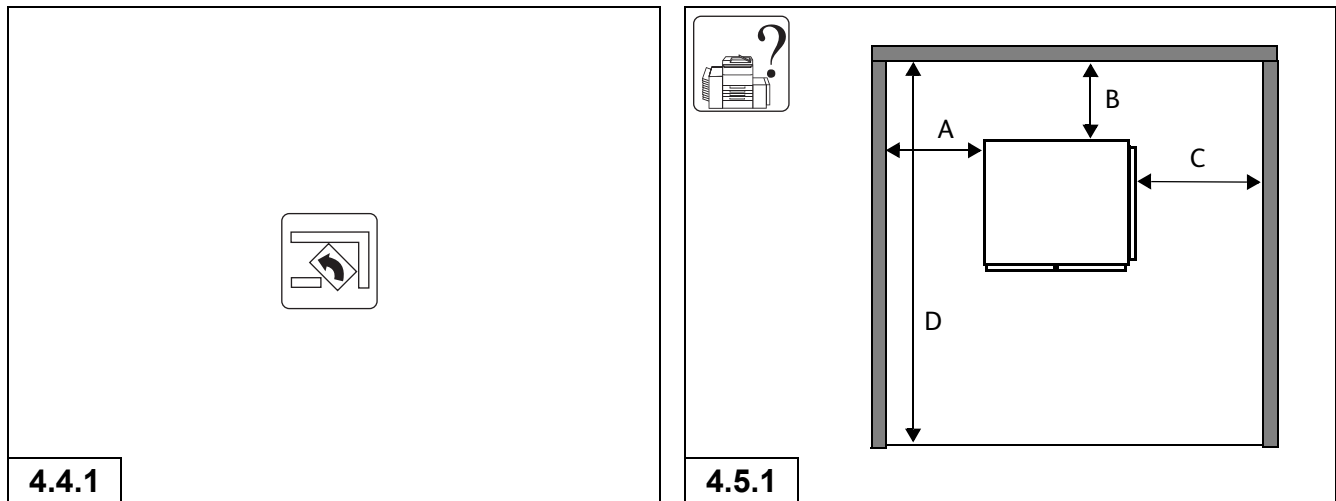


4.4.0 Turning Radii

4.4.1 The Xerox® Adaptive CMYK Plus Technology Cart is small enough such that turning radii is not a concern.

4.5.0 Space Requirements

4.5.1 The Xerox® Adaptive CMYK Plus Technology Cart is an accessory where space requirements are not a concern.

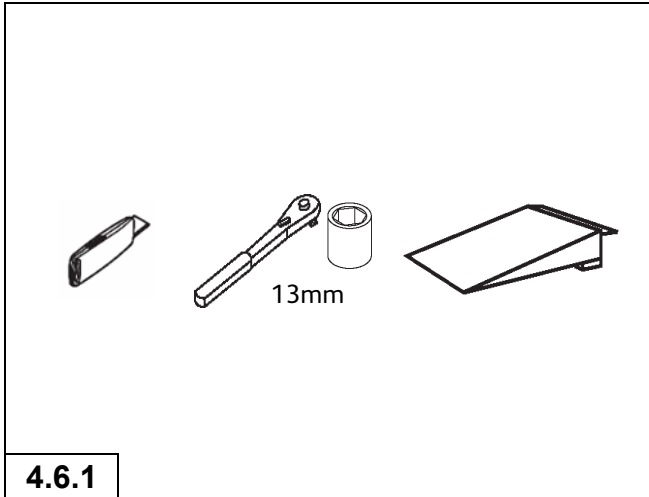




4.6.0 Unpacking and Positioning the Xerox® Adaptive CMYK Plus Technology Cart

4.6.1 Tools and materials for depalletizing and unpackaging the cart are shown.

4.6.2 Cut the banding straps.

4.6.3 Cut open the top flaps of the overpack box.

4.6.4 Fully open the flaps of the box.

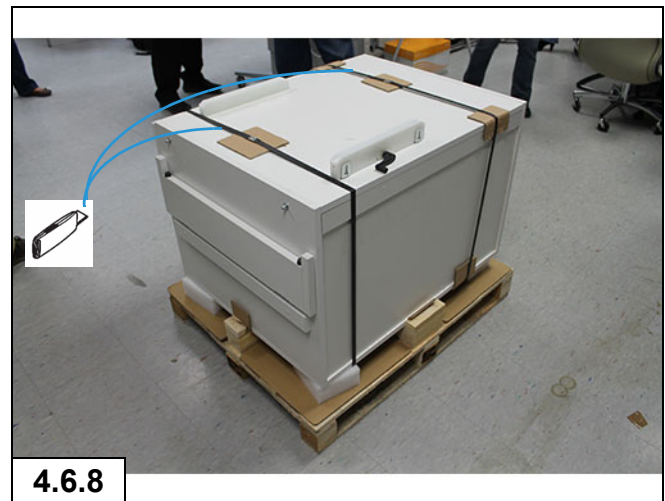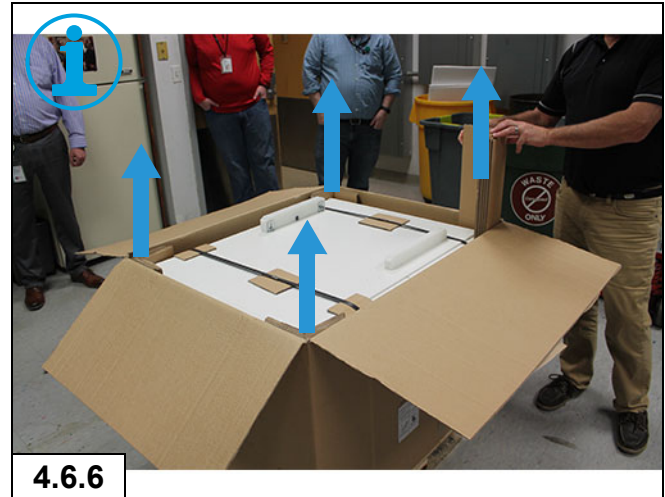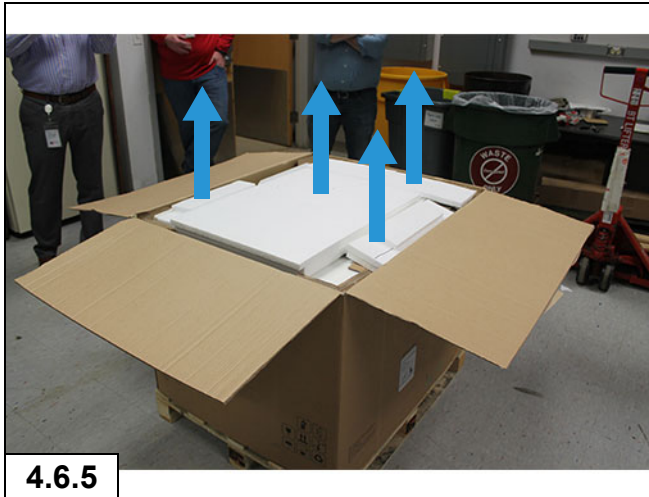

4.6.5 Remove all foam packaging pieces from the top of the cart.






Note: The two top rails may not be present on the Xerox® Adaptive CMYK Plus Technology Cart.

4.6.6 Remove the (4) cornerboards.

4.6.7 Use two people to carefully lift the cardboard overpack up and off the cart.

4.6.8 Cut the (2) banding straps that secure the cart to the pallet.

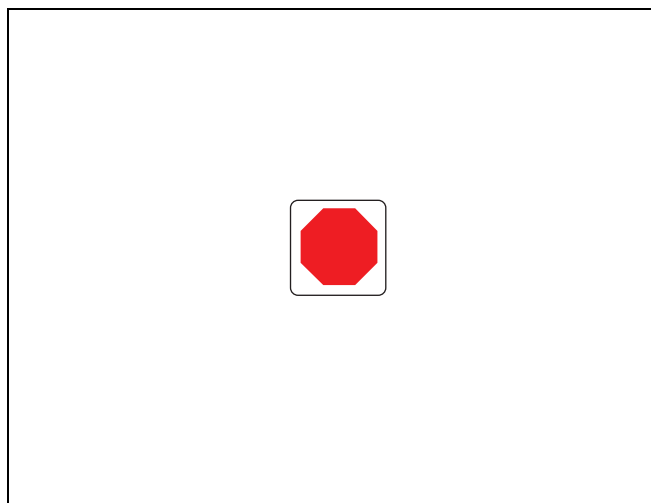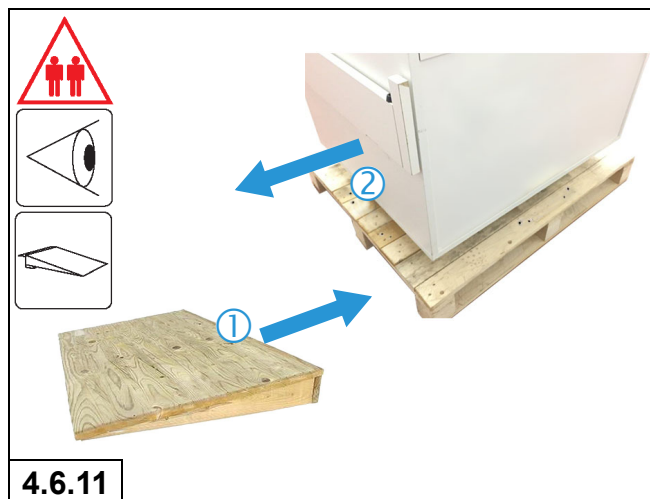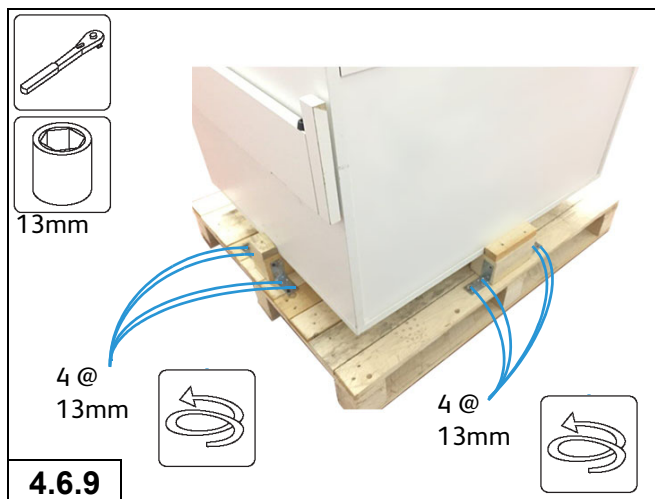

4.6.9 Remove (4) 13mm bolts, blocks and brackets from a long and short side of the pallet.



WARNING: Due to the weight of the cart, two people are required when rolling the cart off the pallet.

4.6.10 ① Position a ramp along the narrow edge of the pallet, then ② use two people to carefully roll the cart off the pallet.





4.6.11 Position the cart near the printer.



Stop: This is the end of the delivery procedure.

Relocation-Removal

5

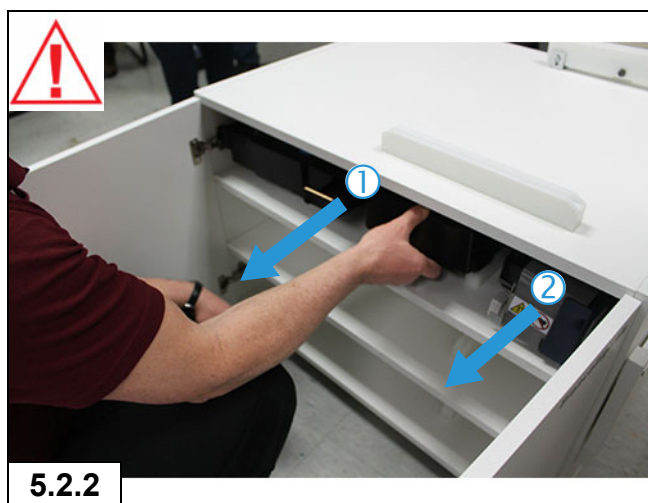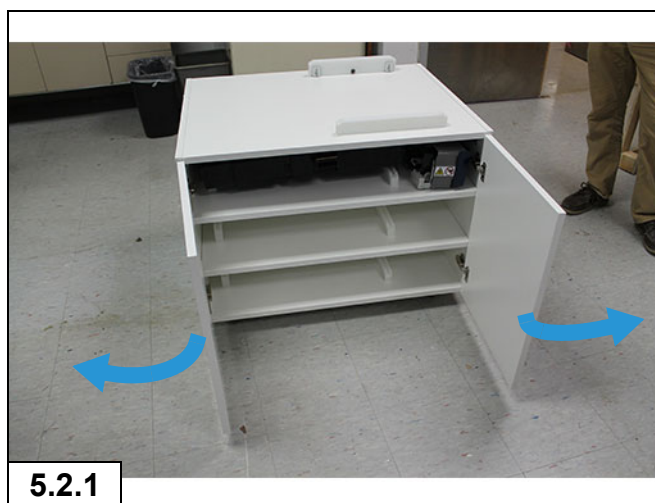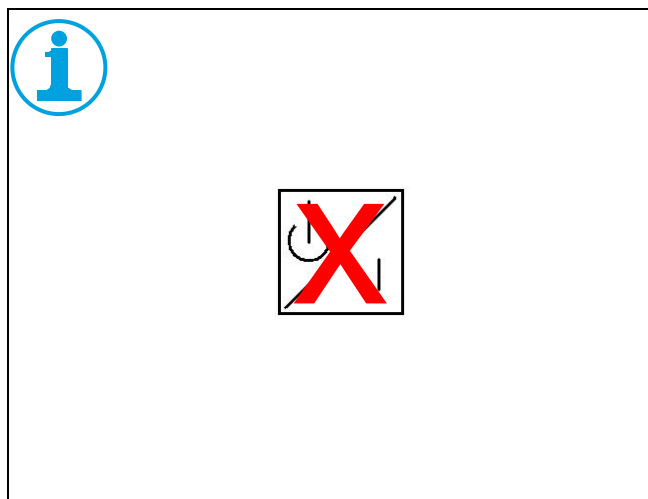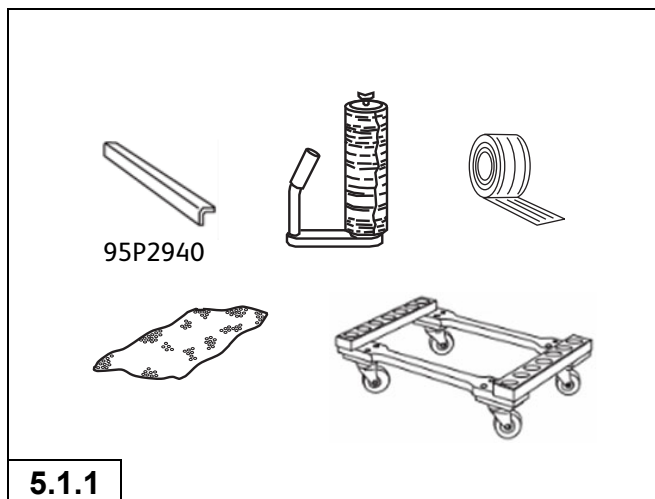

5.0.0 Relocation/Removal

5.1.0 Materials Required

5.1.1 Materials required for the move are shown.

5.2.0 Preparing the Xerox® Adaptive CMYK Plus Technology Cart for the Relocation/Return






Note: The cart has no power switch.

5.2.1 Open the front doors of the cart



CAUTION: Keep the toner dispenser level while removing and packing.

5.2.2 Carefully remove ① the toner dispenser(s) and ② cartridge(s) housing from the cart.

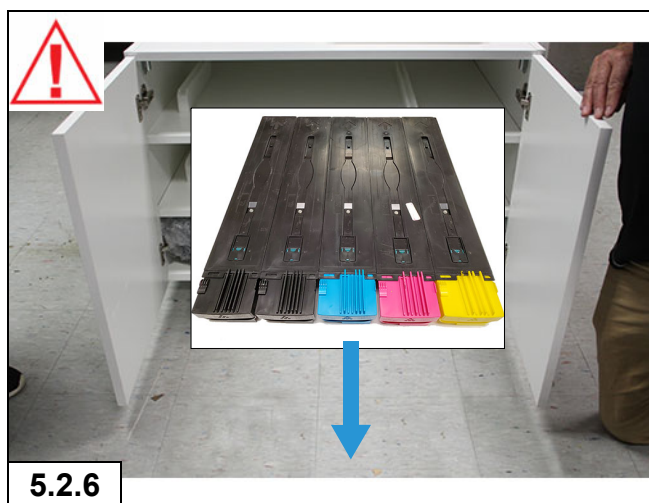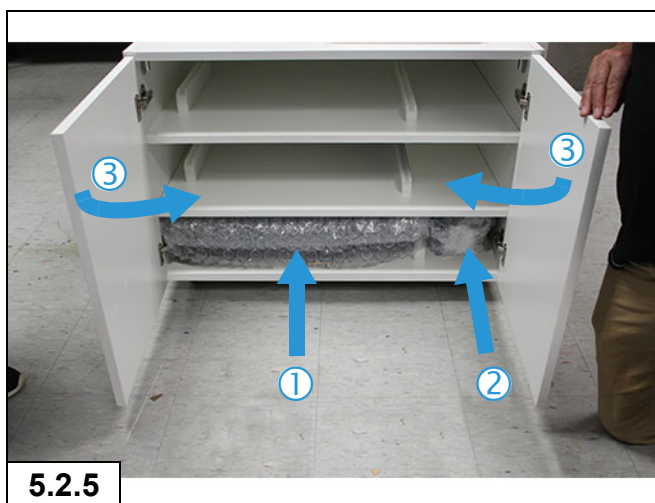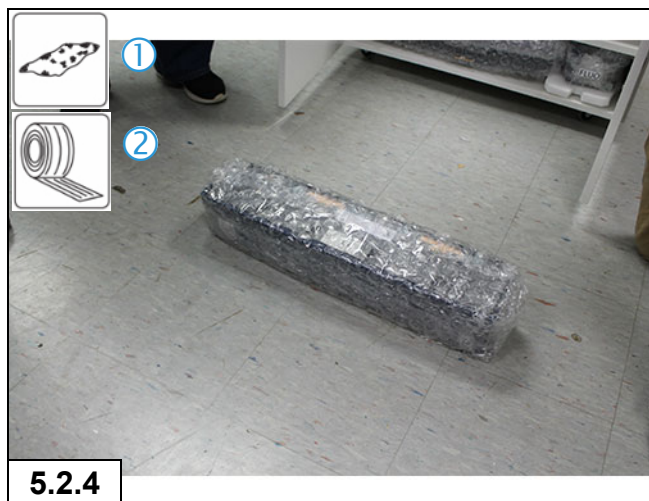

5.2.3 Carefully ① wrap the drum drawer(s) in bubblepack and ② secure with tape.




5.2.4 Carefully ① wrap the dispense housing(s) in bubblepack and ② secure with tape.

5.2.5 ① Return the drum drawer(s) and ② dispense housing bundle(s) to the cart then ③ close the front doors.



CAUTION: Keep the toner cartridges level while removing and packing.

5.2.6 Remove any toner cartridges from the cart.

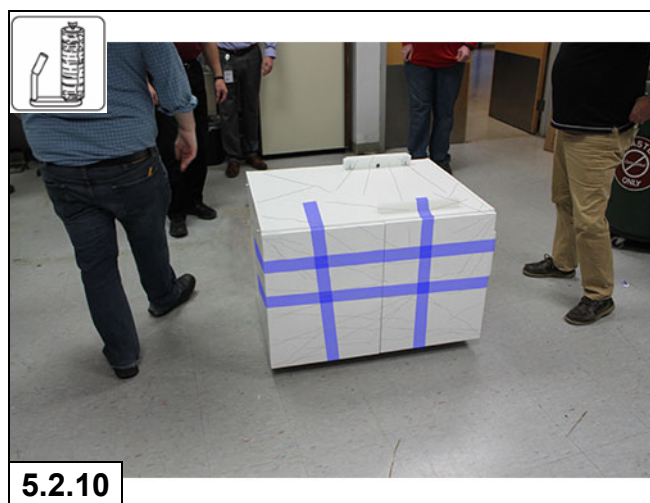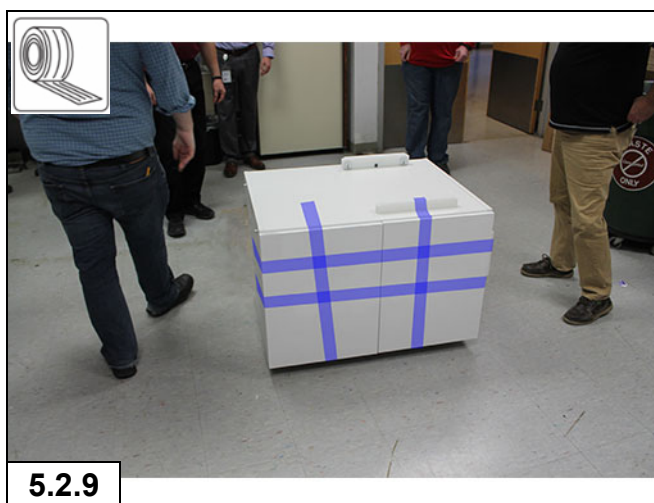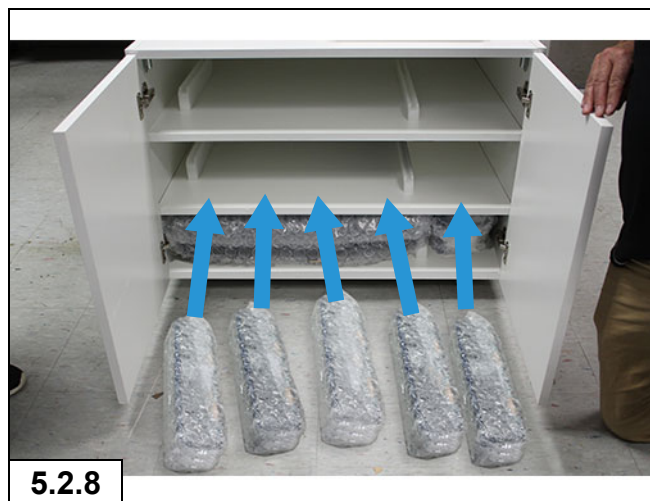



5.2.7 Carefully ① wrap the toner cartridges in bubblepack and ② secure with tape.




5.2.8 Store the wrapped toner cartridges in the cart.

5.2.9 Tape the cart front doors closed.

5.2.10 Wrap the cart with stretchwrap.

Simple Relocation → Step 5.5.3
Complex Relocation → Step 5.3.1

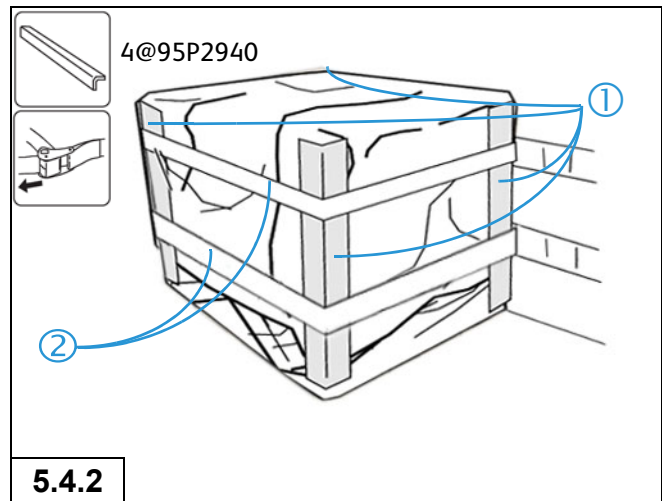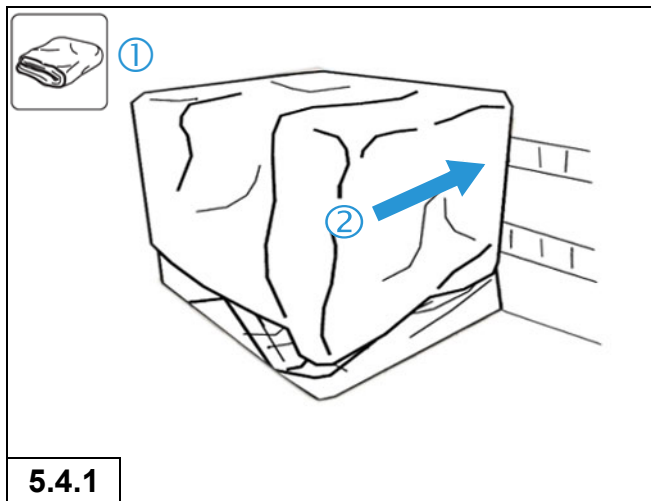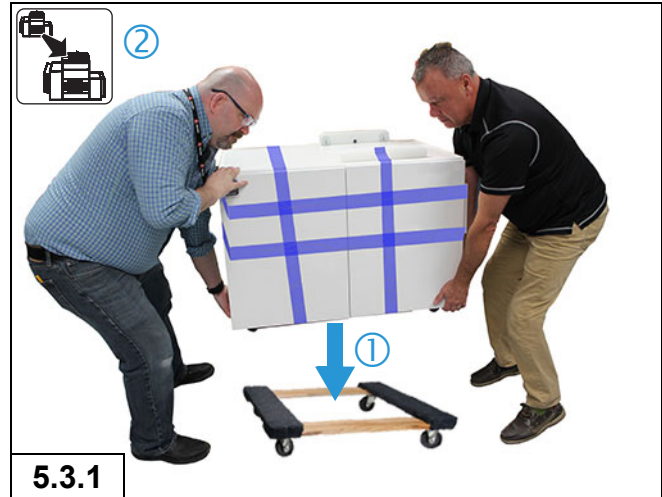

Stop: For Simple Relocations go to Step 5.5.3. For Complex Relocations proceed with Step 5.3.1.

5.3.0 Complex Relocation






WARNING: Due to the weight of the cart, two people are required when placing it on a dolly.

5.3.1 ① Using two people place the cart on a four wheel dolly then ② move the cart on the dolly to the truck.

5.4.0 Moving and Strapping the Xerox® Adaptive CMYK Plus Technology Cart to the Truck (if required)

5.4.1 Once the cart is on the truck, ① cover with a folded blanket and ② position the cart against the wall of the truck.

5.4.2 ① Position a cornerboard (95P2940) on each corner and ② strap the module into the truck with two straps.

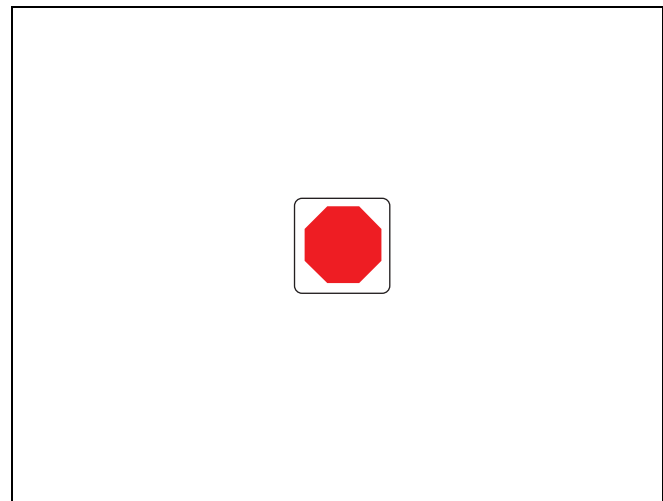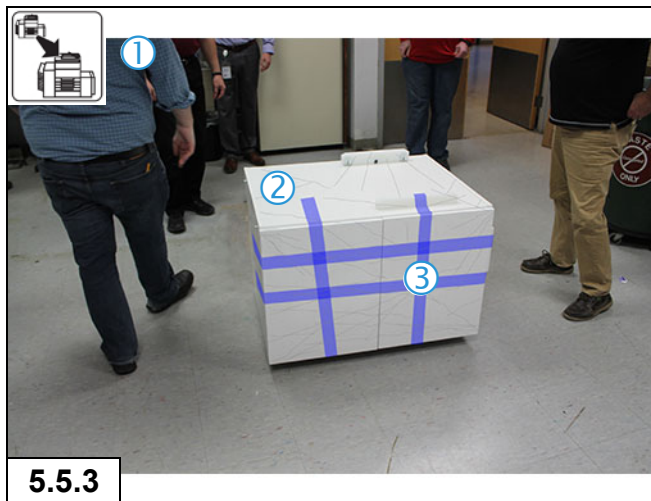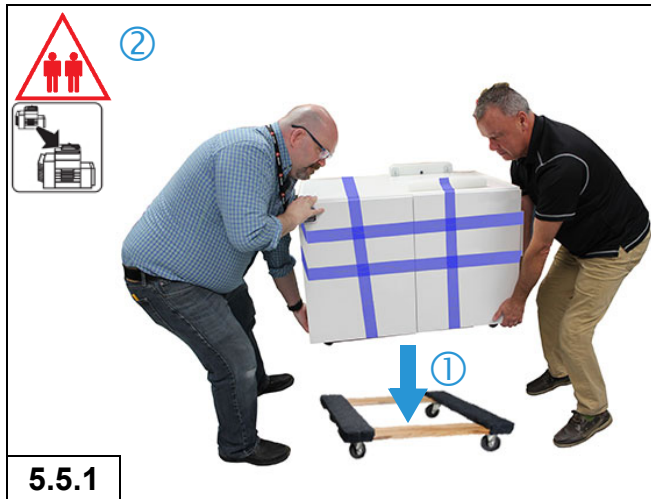

5.5.0 Position the Xerox® Adaptive CMYK Plus Technology Cart at the New Location



WARNING: Due to the weight of the cart, two people are required when lifting the cart onto the four wheel dolly.

5.5.1 ① Place the cart on a four wheel dolly and ② carefully roll into the Customer site.



WARNING: Due to the weight of the cart, two people are required when lifting the cart off the four wheel dolly.

5.5.2 Using two people, lift the cart off the dolly.




5.5.3 ① Position the cart next to the printer then ② remove the shrinkwrap and ③ tape.



Stop: This is the end of the relocation procedure.

Repack-Return

6

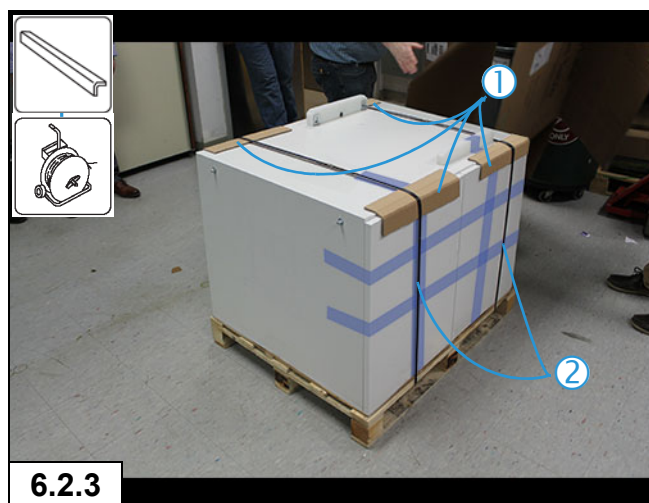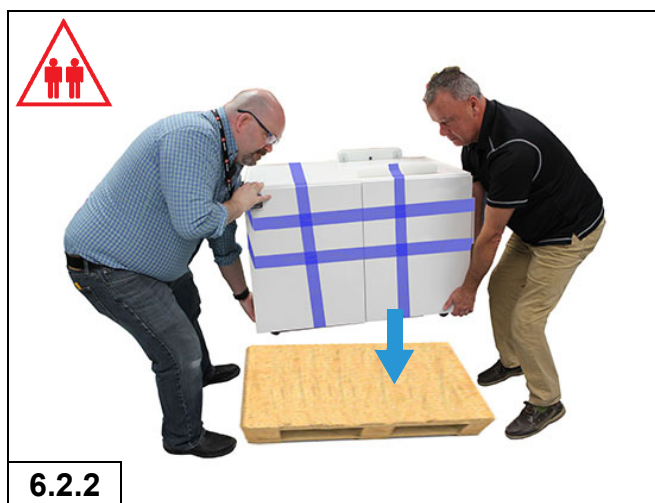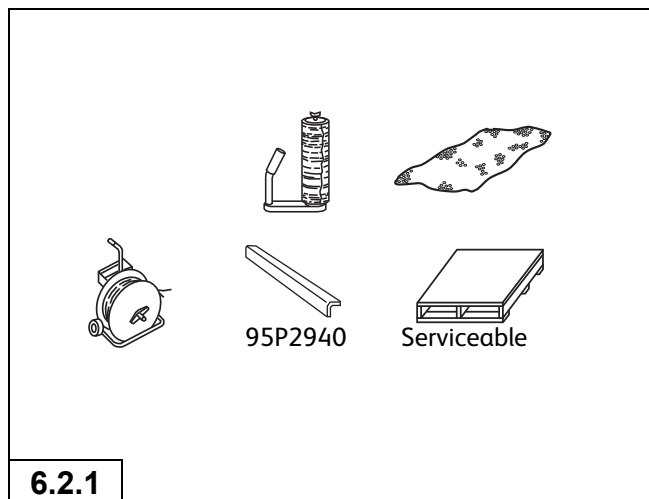

6.0.0 Repack and Return

6.1.0 Repacking Processes for the Xerox® Adaptive CMYK Plus Technology Cart



Note: Complete all steps shown in the complex relocation procedure through moving the cart onto the truck.

6.2.0 Repacking the Xerox® Adaptive CMYK Plus Technology Cart for Return




6.2.1 Materials required for repacking the system are shown.



WARNING: Due to the weight of the cart, two people are required to lift the cart onto the pallet.

6.2.2 Using two people lift the cart onto a serviceable pallet.

6.2.3 ① Place cornerboards over the top edges of the cart and ② band the cart to the pallet with two bands.

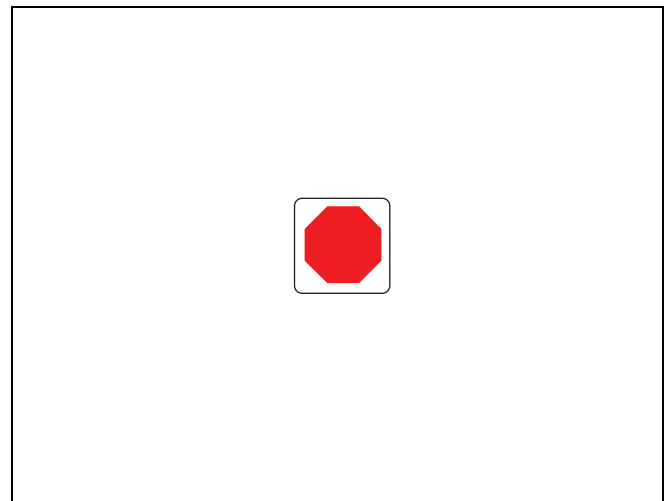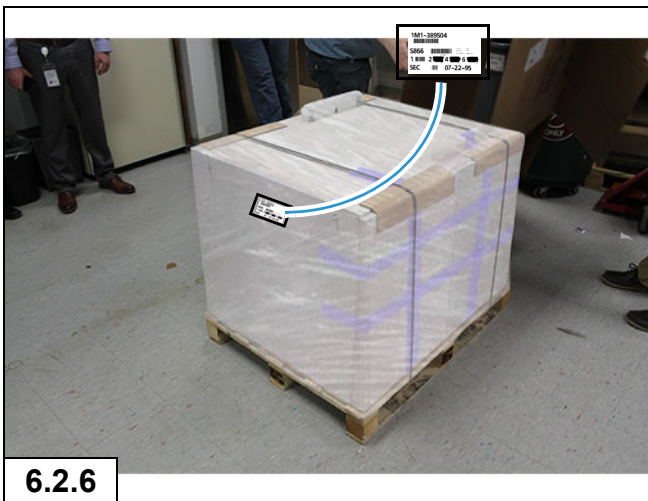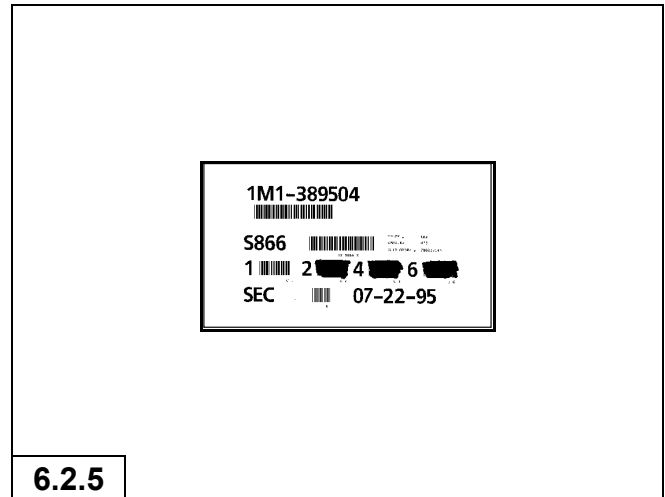

6.2.4 Stretchwrap the cart on the pallet.

6.2.5 Generate the bar code label and cross off all non-applicable codes.


6.2.6 Place the bar code label on the open end of the pallet.



Stop: This is the end of the repack - return procedure.

Accessories

7

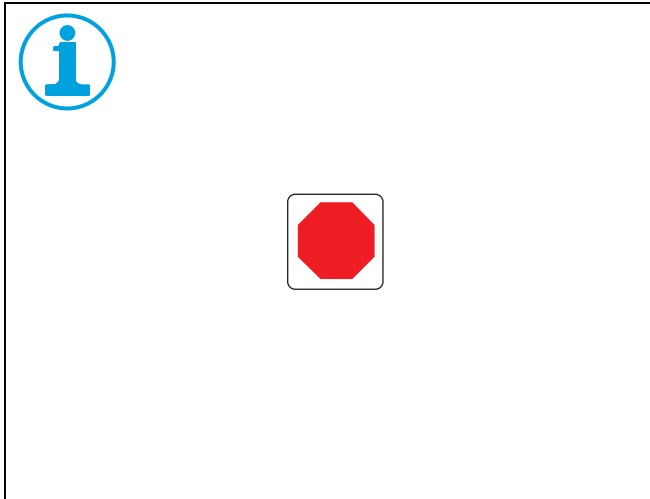

7.0.0 Accessories




Note: This section does not apply to the Xerox® Adaptive CMYK Plus Technology Cart.



Stop: This is the end of the procedure.

Ready-to-Run

8

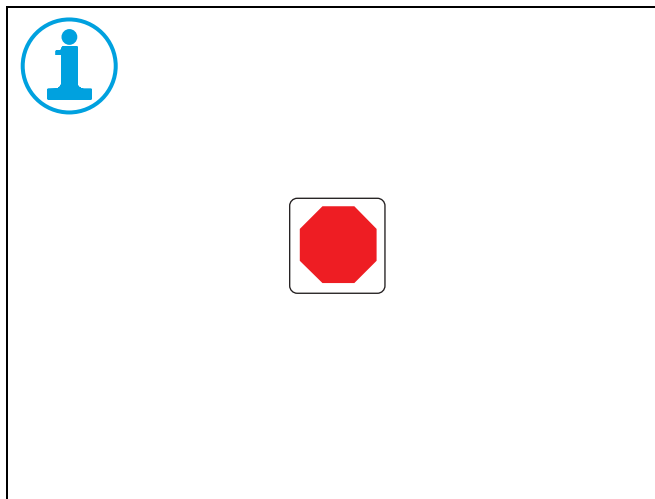

8.0.0 Ready to Run



Note: This section does not apply to the Xerox® Adaptive CMYK Plus Technology Cart.



8.0.1 This is the end of the procedure.